



Follow these steps when applying Brass tags




Loading the Zee Tags brass tagger

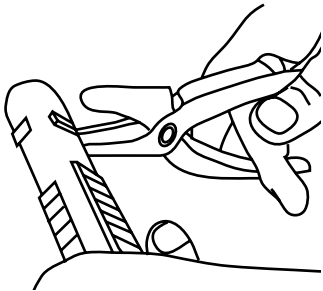

1. Separate one tag out on the organiser and line the tagger up with the tag.

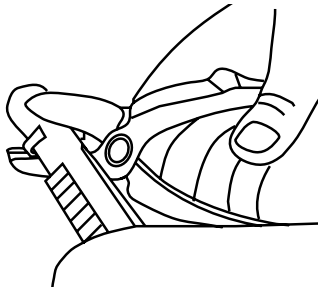


2. Slide the tagger over the tag until clamped.

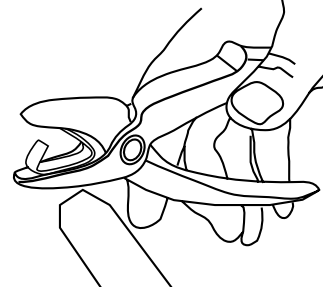


3. Slide the tagger off the organiser. The tag is now ready to apply. Before application, please ensure the tag is seated correctly in the applicator. The tag can also be manually loaded on to the tagger.

Applying brass tags


The ear is thicker closer to the head so it is recommended to position the tag on the top of the ear beyond the thick area.

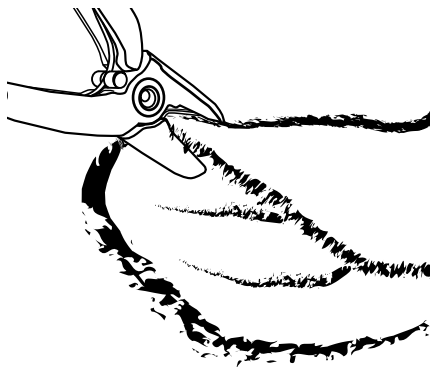

4. Position the tag against the ear so that the short side of the tag will puncture from the bottom. Then squeeze the applicator till it is shut tight allowing the tag's ends to join together.

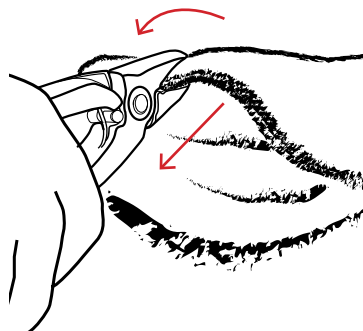

5. Roll the applicator in a downwards direction and then release.

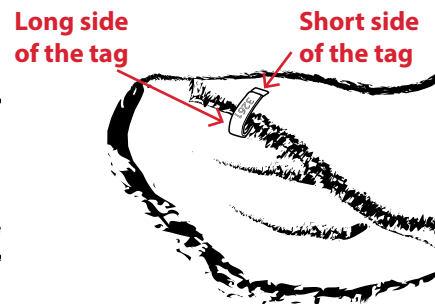

6. Make sure the tag has cut through the ear membrane and that the two brass ends have joined together tightly allowing the tag to move slightly. The long brass side will be visible from the top of the ear.



Apply brass tags with the Zee Tags brass tagger only.

