


Follow these steps when applying TagFaster Tags


- Only apply TagFaster tags with the TagFaster applicator
- Correct application ensures better tag retention
- It is recommended that you dip the tag pins in antiseptic before applying the tags

FOR EXCLUSIVE
USE WITH
TagFaster
RFID HDX & VISUAL
SHEEP & GOAT TAGS

LOADING - 2 STEPS

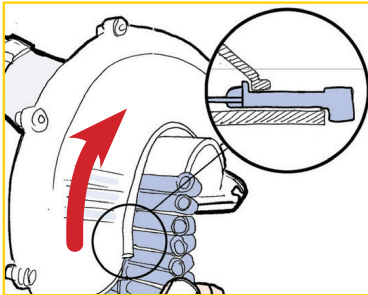


1. Insert tag strip with pins and tag ridge covered by feed horn.

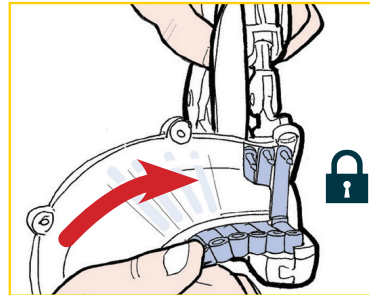


2. Push tags until they "stop" and lock in place.


TAGGING - 4 STEPS

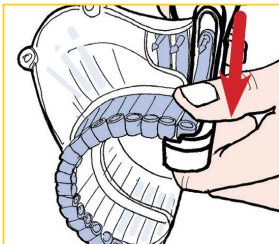

1. Press down on tag to align it within the hammer.

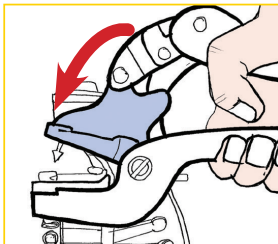


2. Squeeze applicator halfway to prime for tagging.

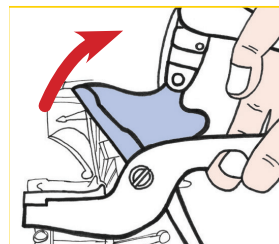

4. Fully and sharply release the handle to feed next tag.



TAGGING FROM THE BACK

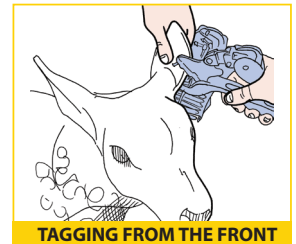

TAGGING FROM THE FRONT


3. TagFaster tags may be applied either from the front or the back of the animal's ear.

Ensure the tag is positioned at 1/4 of the distance from the head avoiding the main blood vessels and ridges of cartilage. In case of young animals, allow for ear growth by leaving the tag to stick out by 1/4 of its length from the ear.


Apply the tag by holding the animal securely and flattening the animal's ear.

TagFaster tags and applicator are suitable for use in marking cradles.

UNLOADING - 2 STEPS

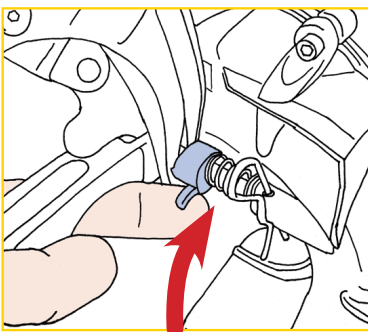

1. Change tag strip (if required), pull tab up and slide tag out.

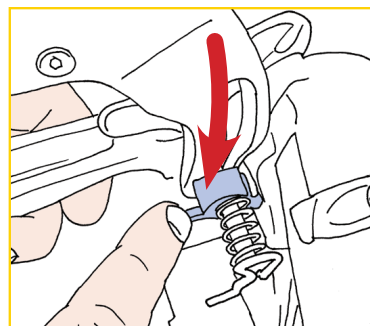

2. Return tab to original position.

2017ZT032_28.03

DATAMARS

Zee Tags is a brand of Datamars | www.datamars.com
© Datamars 2017

Zee Tags Limited / 0800 493 382
Ph: (09) 414 1790 · Fax: (07) 414 1794
info@zeetags.co.nz · www.zeetags.co.nz

